

HOW TO USE ONE TOUCH PTT AND SILENT TALKGROUP FEATURES ON SONIM XP5S

**Linc PTT Software Update
October 2019**



Contents

- **About the Update**
- **New Features**
 - **One Touch PTT**
 - **Silent TalkGroup**



About the update

A new Linc PTT application software update is now available for the Cockpit, Linc PTT, Linc Messaging, and Linc Map apps.

Linc PTT Application versions:

Application	Android Version
Cockpit	08.04.00.030
Linc Map	08.04.00.030
Linc Msg	08.04.00.030
Linc PTT	08.04.00.030-c



How to use One Touch PTT on Sonim XP5s

CONFIDENTIAL. DO NOT DISTRIBUTE.



One Touch PTT on Sonim phones

Purpose: While the screen is locked, turned off, or the Linc PTT client app is in background, **the PTT button on the left side of the phone** can initiate a call to the target identified by the “Default PTT Target” parameter. The “Default PTT Target” can be configured with one of the following 6 options:

- **Last Called:** Target identified in target window, at top of each major view.
- **Selected TalkGroup:** In the PTT TalkGroup view, the Selected TalkGroup is the TalkGroup highlighted in the group list.
- **Foreground Only:** This configuration requires a two button push to initiate a PTT Call.
 - **First PTT Push:** Bring Linc PTT client app to foreground so user can check the target.
 - **Second PTT Push:** Initiate PTT call to target identified in target window.
- **Off:** PTT button produces no action; except when Linc PTT client app is in foreground.
- **Specific TalkGroup:** Initiates PTT group call to user specified TalkGroup.
- **Specific Contact:** Initiates PTT 1-to-1 call to specified contact.




One Touch PTT: Things to remember

- If the Linc PTT App is in the foreground and the screen is on, then the hard PTT button will initiate a PTT call to the target identified in the target window – no change from previous behavior.
- In all cases, if there is an active PTT call, then the hard PTT button will request floor for the active PTT call (does not initiate a new PTT call).
- The One Touch PTT feature is for Sonim XP8 and XP5s devices only.




One Touch PTT: Set up your PTT Default Target on the XP5s

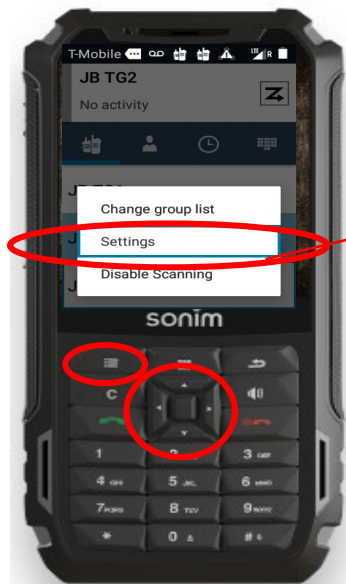


Select menu button from any PTT view.


Use the 5-way keypad to scroll to and select Settings.

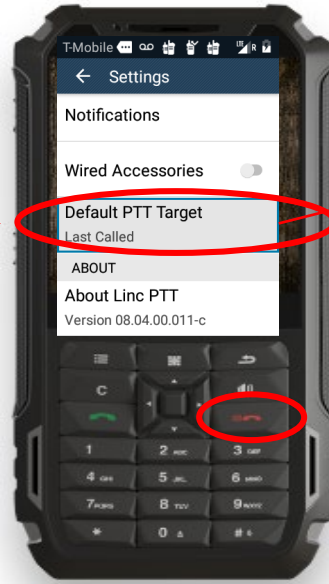

Use the 5-way keypad to scroll to and select "Default PTT Target."

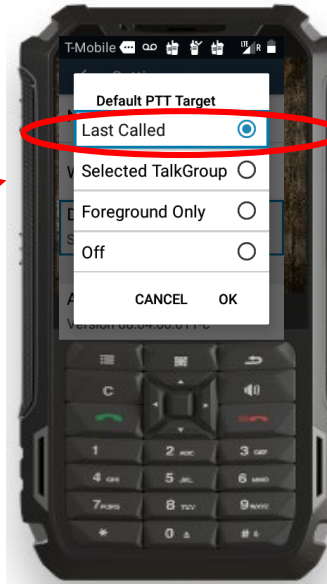

A list of 6 options appears. "Last Called" is the default (existing behavior).

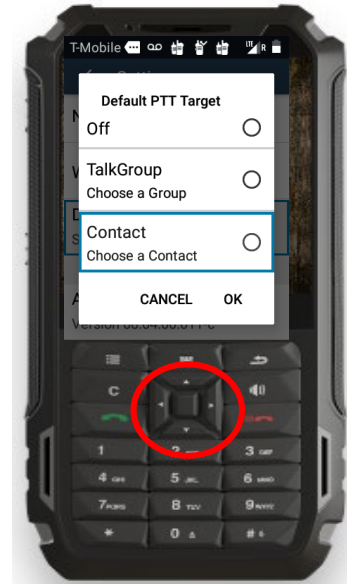


Use the down arrow key to scroll through all options.



One Touch PTT: Selecting a Talkgroup or Contact as the PTT Default Target on the XP5s

Selecting a TalkGroup

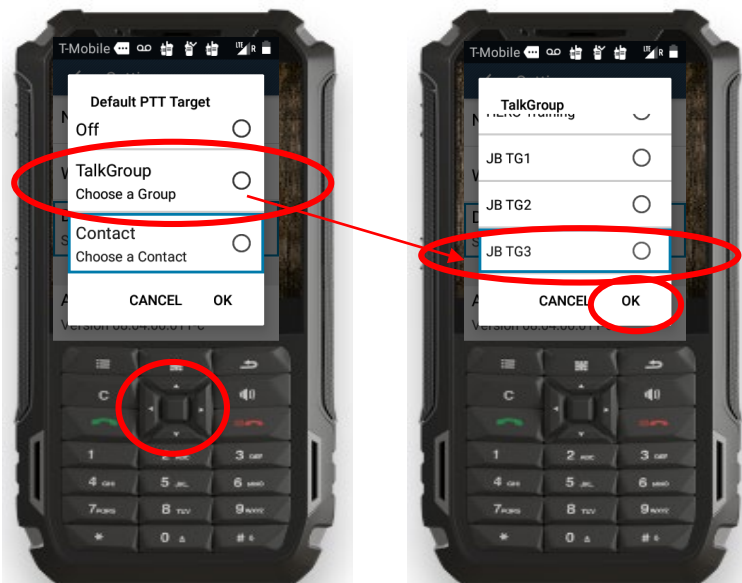


Use the 5-way keypad to scroll to and select TalkGroup as the default target.

A TalkGroup list appears. Use the 5-way keypad to scroll to and select the desired TalkGroup.

Scroll and select OK to save selection.

Selecting a Contact

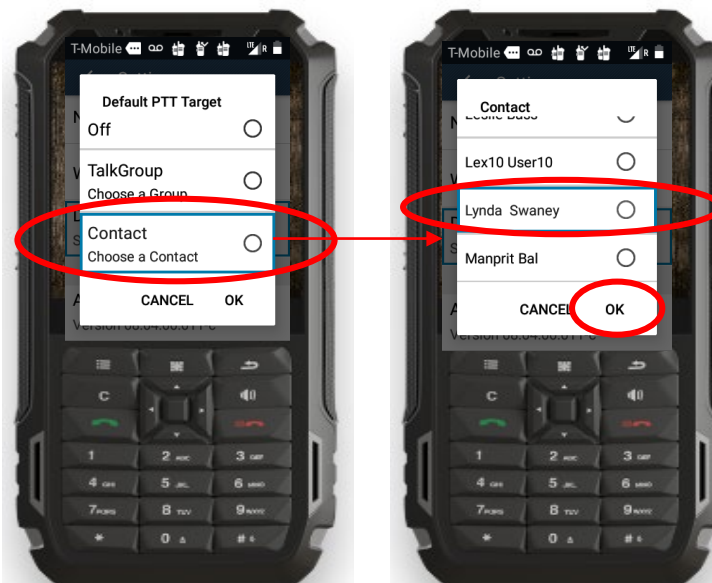

Use the 5-way keypad to scroll to and select Contact as the default target.

A TalkGroup list appears. Use the 5-way keypad to scroll to and select the desired TalkGroup.

Scroll and select OK to save selection.

How to use Silent Silent TalkGroup on Sonim XP5s

CONFIDENTIAL. DO NOT DISTRIBUTE.




Silent Talkgroup

- **Purpose:** In situations that require quiet attention (meetings, etc.) and it is desired to remove TalkGroup chatter, but leave the Private Call capability intact, the user can accomplish this by disabling all TalkGroups. While TalkGroups are disabled, the user will not be able to initiate or receive group calls.
- **Exceptions while TalkGroups are disabled:**
 - **Broadcast group calls:**
 - The user can initiate broadcast group calls if the user has speaker privileges.
 - The user can receive broadcast group calls.
 - **Emergency group calls:**
 - The user will not receive emergency group calls.
 - The user can initiate an emergency call to a pre-defined emergency target (either a group or individual).
 - If TalkGroups are disabled and the user initiates an emergency call, then TalkGroups will automatically be enabled.
 - User can initiate or receive **1-to-1 Private Calls** (contacts view).
 - User can send/receive text messages to/from a TalkGroup.
 - User can map members of a TalkGroup.




Using Silent TalkGroup on the XP5s

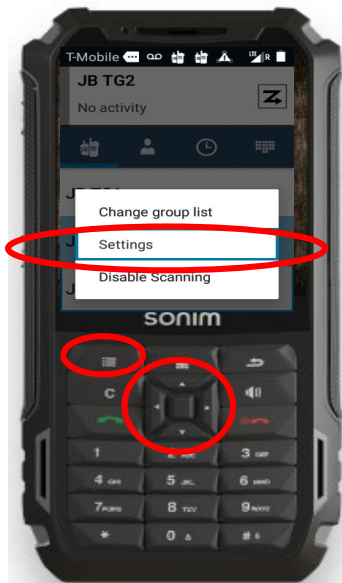


Select menu button from any Linc PTT view.

Use the 5-way keypad to scroll to and select Settings.

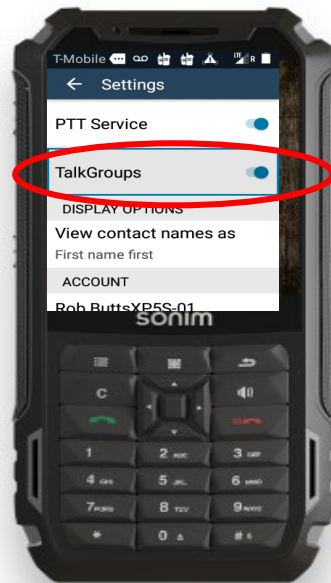

Use the 5-way keypad to scroll to and select TalkGroups.

TalkGroups are enabled by default.

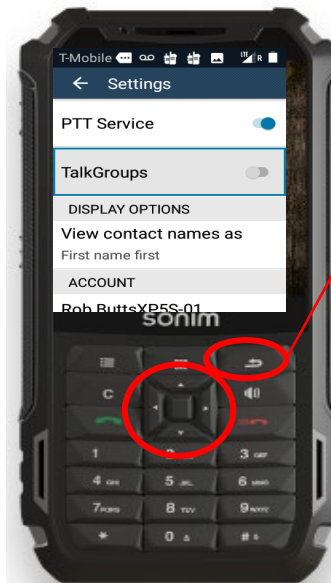

Press Enter on the 5-way keypad to disable TalkGroups.


Press return button in the upper right of the keypad area to return to the Linc PTT app.



“TalkGroups Disabled” banner appears in all views.




Turning off Silent TalkGroup on the XP5s

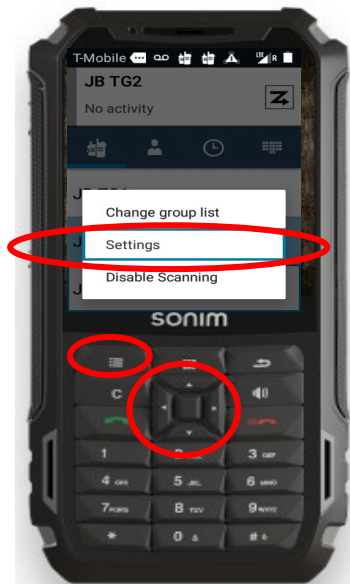


Select menu button from any Linc PTT view.

Use the 5-way keypad to scroll to and select Settings.

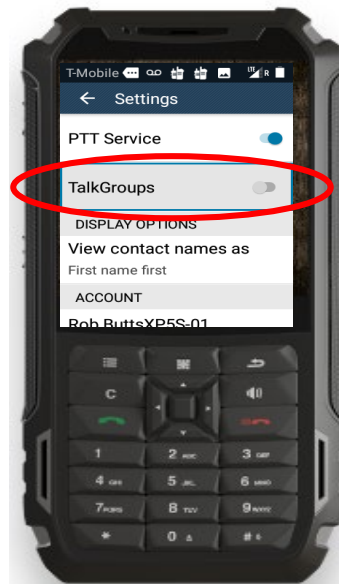

Use the 5-way keypad to scroll to TalkGroups.

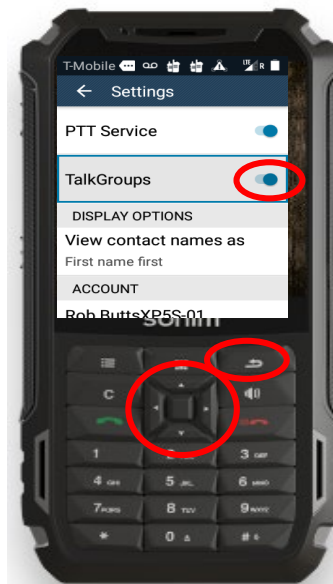

Press Enter on the 5-way keypad to enable TalkGroups.

Press the back button in the upper right of the keypad area to return to the Linc PTT app.

